


SUPERLIGHT FRONT WHEEL AXLE & HOOK FOR T LINE

IMPORTANT INFORMATION

- It is vital that you follow the correct fitting procedure and tighten the fixing bolt correctly; otherwise, the front wheel might not be secured properly, or you might cause damage to the bike.
- Fitting a new chainring might affect the function of the hook, which retains the front wheel in place when the bike is folded.
- If you are unsure of the correct fitting process please consult your Brompton dealer or Brompton Customer Service support@brompton.co.uk

Fig. 1

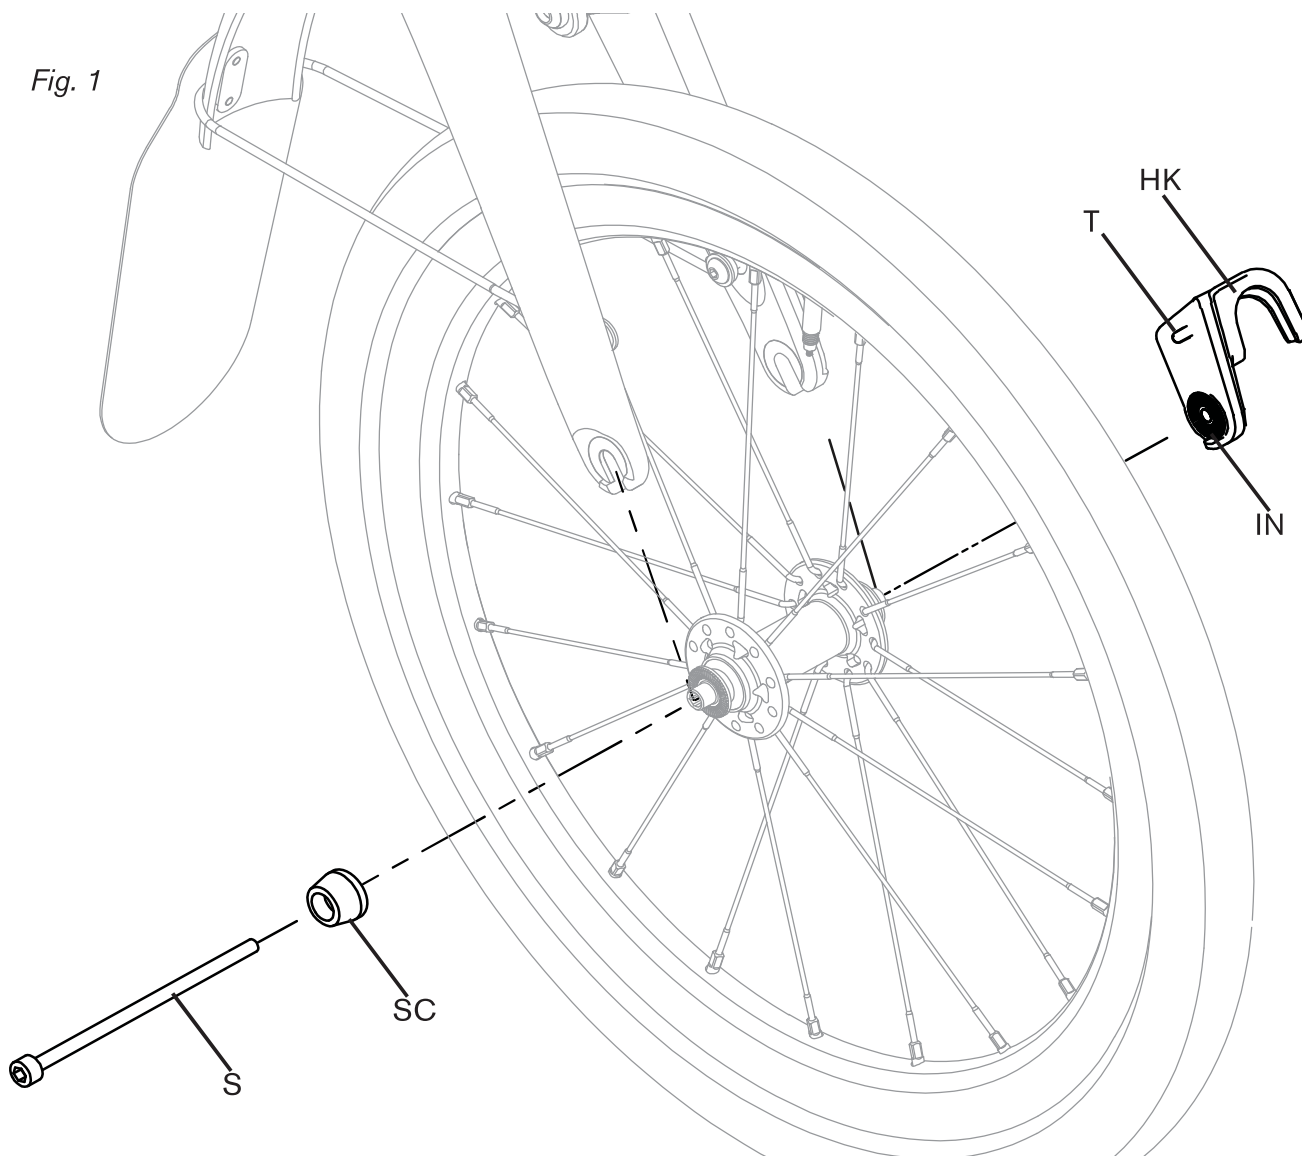

REMOVAL

To remove the hook HK, unscrew the skewer S with a 4mm hex key. The hook features the new intergrated wheel nut IN design.

FITTING

To fit, insert skewer as normal, then correctly align the hook in the front fork (fig. 1), making sure the raised tab T fits into the corresponding hole on the fork, then tighten the skewer bolt to 7Nm.

